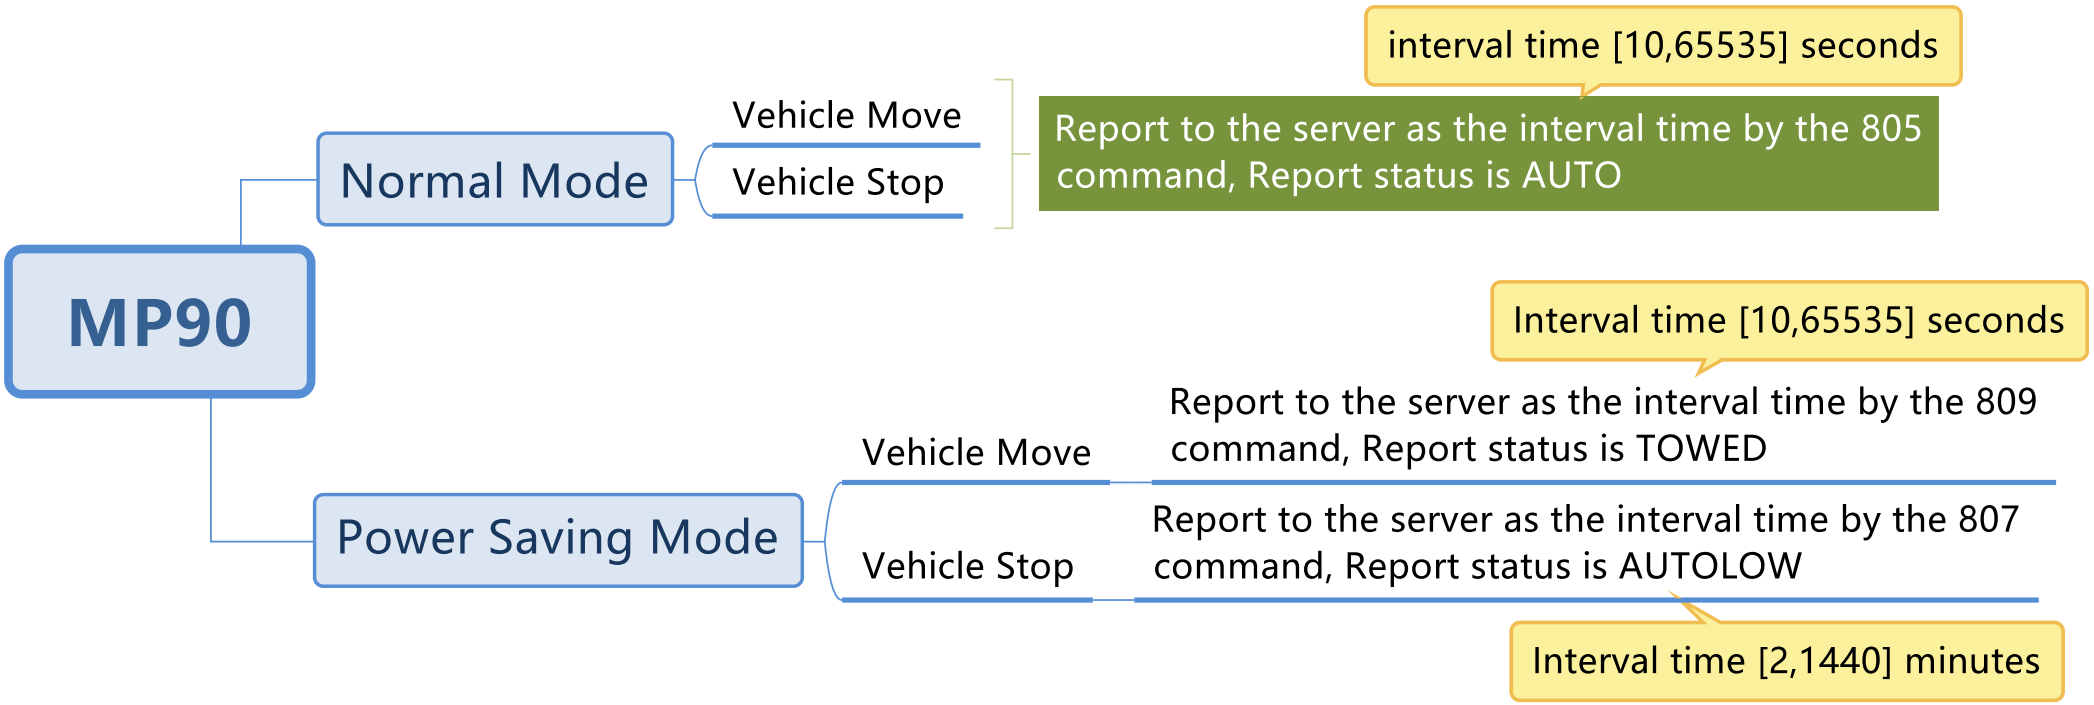
MP90
Normal Mode
Vehicle Move
Vehicle Stop
Report to the server as the interval time by the 805 command, Report status is AUTO
interval time [10,65535] seconds
Power Saving Mode
Vehicle Move
Report to the server as the interval time by the 809 command, Report status is TOWED
Interval time [10,65535] seconds
Vehicle Stop
Report to the server as the interval time by the 807 command, Report status is AUTOLOW
Interval time [2,1440] minutes